SECTION T5.54

ANNUALLY

Grease (if motor is

fittings).

equipped with grease

Verify that arms are

not bent or broken.

Inspect. clean out if

Check for plugging or wear, clean or replace

Examine for internal

Examine for bent or

broken components,

replace if necessary.

than 1/8" thick.

Check for wear. replace if more than

necessary.

1/16" play.

if necessary.

corrosion.

if needed.

Inspect, replace if less

R. P. ADAMS PORO-EDGE AUTOMATIC WATER STRAINERS ROUTINE MAINTENANCE SCHEDULE

SIX MONTH

Change oil, grease

Inspect, Re-grease if

(see Winsmith lubrication

requirements).

necessary.

MONTHLY

Check oil level,

leaks

Check oil seals for

Check and adjust to very slight leakage.

Check for leakage.

Check Valve for tight shutoff, replace seats,

www.rpadams.com

COMPONENT

Speed Reducer

Packing Gland

Thrust Bearing

Backwash Arm(s)

Distributor Barrel /

Cutless Bearing(s)

Poro-Edge Tubes

Shell and Cover

Drive Shaft & Drive

Shaft Extension (if

Control Panel and

Pressure Switch

Backwash Valve &

applicable)

Differential

Operator

Seal Plate(s)

Raw Water

Chamber

Gaskets

Motor

Shear Key

WEEKLY

Check for sheared key. Replace, if required.

BUFFALO, NEW YORK 14240

R. P. ADAMS COMPANY. INC.

Check timing

functions and all

electrical devices for proper operation.

info@rpadams.com

closed stops.

Check Actuator travel

for full open and full

1

10/06/10

SUPERSEDES TD-45941 (1/15/03)